


Diagram illustrating the assembly of the front suspension arms. The components are labeled as follows:

- 1**: Upper control arm
- 2**: Lower control arm
- 3**: Chassis


The diagram shows the upper control arm (1) being installed onto the chassis (3). A large arrow indicates the direction of assembly.

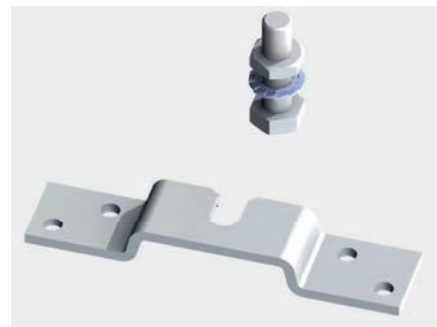

- Fissaggio sopra Porta, in appoggio
- Aggancio porta: **FRONTALE**



Rif.	Codice Parte	Descrizione	Q.tà (nr.)
(1)	10010013	PIASTRA SOSPENSIONE PORTA, IN ACCIAIO ZINCATO, PER AGGANCIO FRONTALE	2
(2)	PUMA . V02E	VITE TESTA ESAG. M8x30 ZINCATA + DADO M8 BASSO ZINCATO + ROSETTA DENTELLATA	2 + 2 + 2
(3)	PUMA . 9010	GUIDA INFERIORE IN NYLON, PER PORTA "LEGNO". Anti tremolio	1

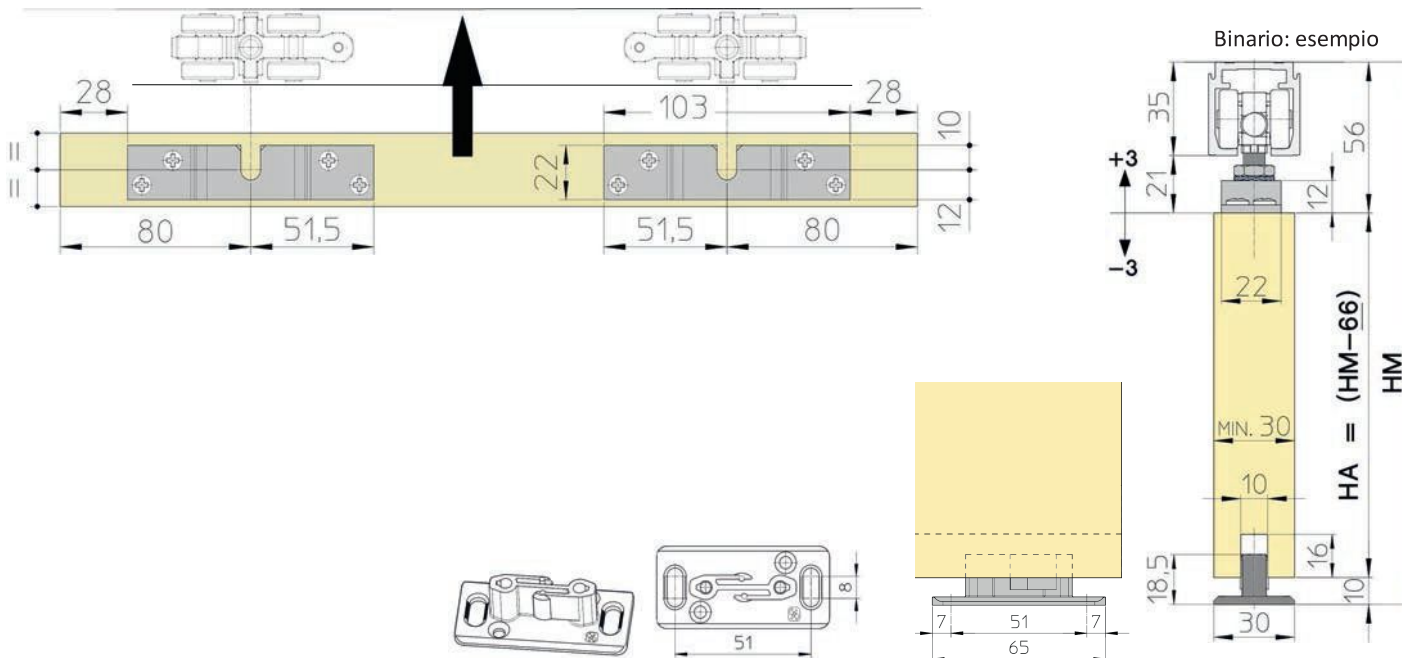

Riferimento "KIT.02" (*)	Descrizione	Descrizione principale Kit	Codice per il Solo "KIT.02-E"
05	Kit.02-E Puma 5113	Staffe Sospensione per Aggancio Porta Frontale. Portata Fino a 100 Kg/Kit. Acciaio Zincato.	PUMA . 2 . 5113

Art.	Composizione	Carrelli KIT.01	Staffe Sospensione "KIT.02"	Richiami Decelerati KIT.03	Accessori ACC
PUMA	1	XX	YY	KK	ZZ

(*) Per generare il **Codice d'ordine Composizione Generale**: inserire il "Riferimento" del **"KIT.02"** nell'apposito campo (YY).